



OWNER'S MANUAL

MagIQ Touch Controller



(English)



Hello and congratulations on purchasing a MagIQ Touch Controller for your home!

The MagIQ Touch Controller is a versatile and intelligent controller that can be used with a range of products from Seeley International. Please refer to the relevant sections in this manual as well as the owner's manual provided with each of your products for information on how to set-up and operate your system.

TABLE OF CONTENTS

GENERAL TIPS	3
QUICK START	4
OPERATION	10
NAVIGATION	10
SIMPLE DISPLAY	13
MANUAL MODE	14
PROGRAM MODE	15
SETTINGS MENU	23
GENERAL MENU	25
COOLER & HEATER MENUS	26
About Appliance	26
Min / Max Set Temperature	27
Night Quiet Mode	28
Status Information Display	28
SERVICE MENU	29
WARNINGS & SERVICE MESSAGES	30
POWER OUTAGES	32
TROUBLE SHOOTING	32

GENERAL TIPS

- Mount the MagIQ Touch Controller in a room you want climate controlled. Ideally it should be positioned 1.2m from the floor and away from any other heating or cooling sources.
- Ensure the Controller is not exposed to direct sunlight as this will impact the temperature reading.
- Ensure any cable routing holes in the wall behind the Controller are blocked as drafts can impact the temperature reading.
- Avoid blocking or restricting the vent holes located in the side of the Controller, as this is where the thermostat is located.
- Ensure the plug is properly located into the socket located in the rear of the controller before mounting it.
- Do not use harsh chemical cleaners to clean the touch screen. For best results use distilled water or a touchscreen specific cleaning agent with a microfibre cloth.

QUICK START

Here's a brief visual guide to get you started quickly!
Continue reading for detailed instructions.

STEP 1

Activate screen



ILL1521-A



ILL1522-A

QUICK START cont

STEP 2

Select mode from lower taskbar



ILL1523-A



ILL1524-A


QUICK START cont

STEP 3

Turn on cooler or heater



ILL1525-A

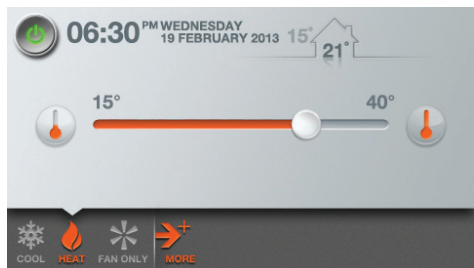


ILL1526-A

QUICK START cont

STEP 4

Set desired temperature

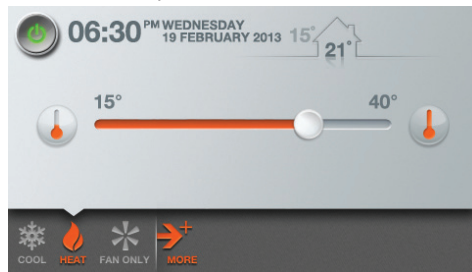

ILL1527-A




ILL1528-A

QUICK START cont

STEP 5

Access more advanced options by expanding the lower taskbar

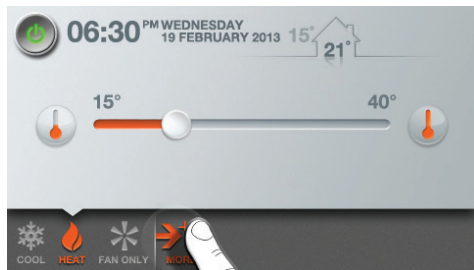

ILL1529-A



ILL1530-A

QUICK START cont

STEP 6

Access wall control and system settings in the SETTINGS menu.



ILL1531-A



ILL1532-A


OPERATION

NAVIGATION

There are a few things you might need to know in order to navigate your new MagIQ Touch Controller.

If you are unfamiliar with touch screen technology, the following section outlines some of the sliders and buttons you will need to use throughout the interface.

Slide for quick temperature adjustment:

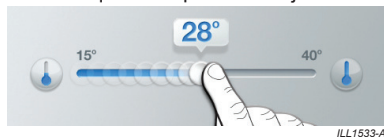

Tap for incremental adjustment or press and hold:




Slide on and off:



OPERATION cont

NAVIGATION cont

Press mode option buttons:

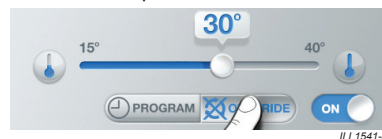

Make your selection(s):



The header is the top section of your screen. This is where, most importantly, you'll find the on/off button for your system.



 
The lower taskbar is the section at the bottom of the screen. This is where you'll be able to select your primary mode (cool, heat or fan only). Just be aware that you'll only see icons that are relevant to your installation as the Controller knows what it's attached to.



OPERATION cont


NAVIGATION cont

The lower taskbar can be expanded to reveal more advanced control options. Here you can choose to operate manually or with a 7 day program. You can also access the settings menu for more options again.



ILL1540-A

The **operating space** in between will change depending on what mode you have selected.

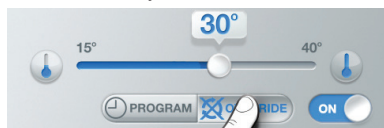

ILL1541-A



ILL1542-A

OPERATION cont

SIMPLE DISPLAY

There is no need to display advanced functionality if it is not required. In simple display you can set your mode and temperature and let the MagIQ Touch Controller do the rest.



ILL1543-A

OPERATION cont

MANUAL MODE

If your schedule is unpredictable and you want full minute-to-minute control of your system, use MANUAL mode.

MANUAL mode works slightly differently depending on what kind of product you are controlling and how your system is set up.

An evaporative cooler will try to maintain the temperature you want by speeding up or slowing down the fan, or you can choose to disregard the room temperature and keep the cooler running at a constant fan speed.



ILL1544-A

Gas ducted heaters and add-on coolers work a little differently. In single zoned installations you can control both the temperature and the fan speed limit simultaneously.

In zoned installations, fan speed is automated and so will not appear on your screen.



ILL1545-A

OPERATION cont

PROGRAM MODE

If you like routine and want to “set and forget” a seven day program that suits your lifestyle, activate PROGRAM mode.

PROGRAM mode divides each day into four time periods. You decide when each of these periods begins and what you want your system to be doing.



ILL1546-A

OPERATION cont

PROGRAM MODE cont

Program mode is flexible.

If you leave or arrive home early, you can easily skip forwards to the next period. The program will take over again once the next time period begins.



ILL1547-A



ILL1548-A

OPERATION cont

PROGRAM MODE cont

Or perhaps you want to make the temperature higher without permanently changing your program. The **OVERRIDE** button will allow you to temporarily change what's been set by the program until the next time period begins.



ILL1549-A

OPERATION cont

PROGRAM MODE cont

To set up a program first press the EDIT button on the PROGRAM home screen.




This will take you to a program overview screen where you can tap each day to see what's been set.



OPERATION cont

PROGRAM MODE cont

If your system has zones, you'll see each zone listed in rows. Just scroll up and down to view them all.

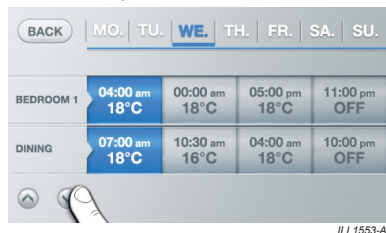


To set-up or change a time period, touch the time period and an adjustment screen will appear




OPERATION cont

PROGRAM MODE cont


Turn the system on or off.

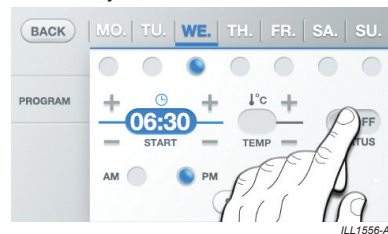

Adjust the start time.

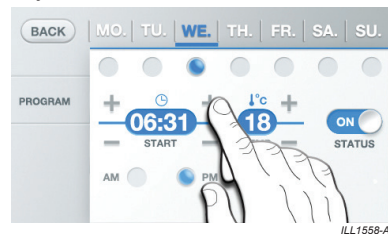


Adjust the set temperature.

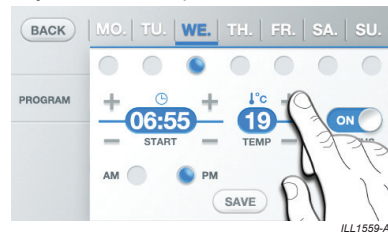


OPERATION cont

PROGRAM MODE cont

You can even link days together so you only have to make the adjustments once.

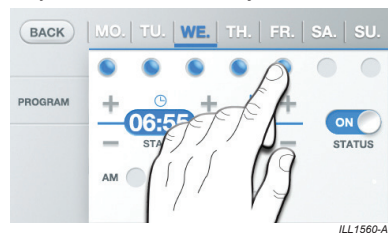

Then save your changes and you're done.

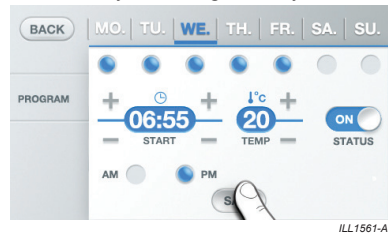

OPERATION cont


PROGRAM MODE cont

Now you can review what you've done and select another time period.



ILL1562-A

Or if you're done, press BACK to return to the program home screen.

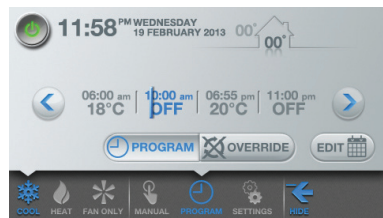

ILL1581-A

SETTINGS MENU

The SETTINGS menu contains extra options. There are general settings for your MagIQ Touch Controller and the system as a whole. You'll also find individual menus for the product(s) you have installed. At the end is a menu for service agents, to help them help you.



ILL1563-A

Note! The MagIQ Touch Controller will only display the menus and menu items that are relevant to your system. What you see in this document may not be exactly the same as what you see on your screen.

Navigate through the menus by tapping the heading tabs at the top of the screen.




ILL1564-A



ILL1565-A

SETTINGS MENU cont

All the menu items are listed on the left hand side of the screen.

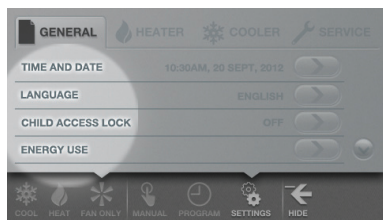


ILL1566-A

The current status is listed on the right, close to the arrow buttons.



ILL1567-A


If you want to change a setting or access a menu item, press the arrow button.

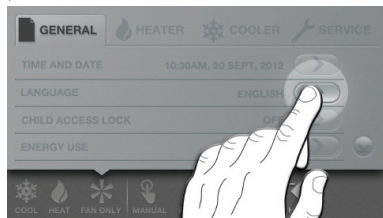

ILL1568-A

SETTINGS MENU cont

There are some settings that are just for trained service agents or installers. You won't be able to access any of these options without a pin code.

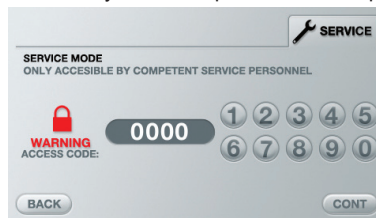

ILL1577-A

GENERAL MENU

The GENERAL menu includes settings or information related to your MagIQ Touch Controller, or the system as a whole.

- Time and Date
- Language
- Child Access Lock (set a pin to restrict access)
- Zone Renaming* (personalise your zone names)
- System Configuration**
- System Reset**
- System Manual Scan**

* Only available for zoned installations.

** Only accessible by competent service personnel

SETTINGS MENU cont

COOLER & HEATER MENUS


The COOLER and HEATER menus include settings or information related to the specific Seeley International cooling or heating products installed within your system.

If you want to know more about the specific settings of your product, please refer to the separate owner's manual you received with it.

Here are some settings that are common to all cooling and heating products:

About Appliance

Access information about the appliances installed in your system.

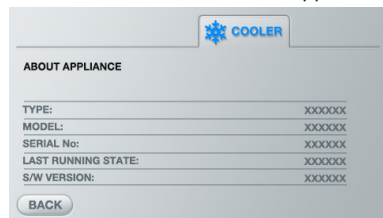


ILL1570-A

SETTINGS MENU cont

Min/Max Set Temperature

You can change the minimum and maximum temperature displayed on your slider, depending on what temperature range you prefer your system to work within.

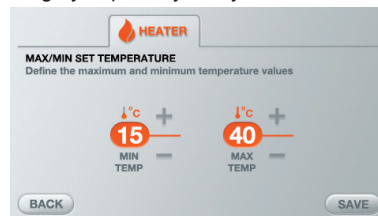

ILL1571-A




ILL1572-A

SETTINGS MENU cont

Night Quiet Mode


Restrict fan speed over the night time period for a quiet night's sleep.

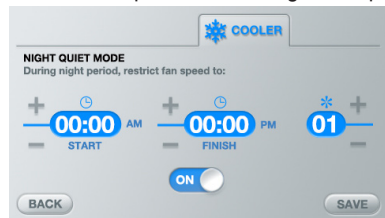

ILL1573-A

Status Information Display

When this option is turned on, a temporary information display window becomes accessible on all MANUAL and PROGRAM screens.

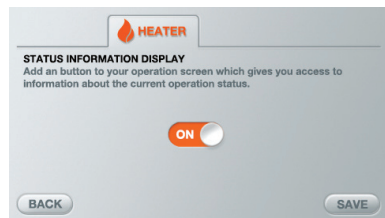

ILL1574-A




ILL1575-A


SETTINGS MENU cont

SERVICE MENU

The SERVICE menu contains information and functions for competent service personnel. Access is locked with a service pin code.

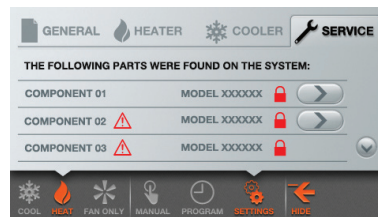

ILL1576-A

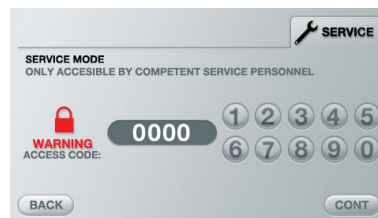

ILL1577-A

WARNINGS & SERVICE MESSAGES

Your MagIQ Touch Controller will operate to make sure everything is as it should be. If it detects a change or a problem, it will notify you immediately.

Perhaps you've turned off the power to your cooler over winter. The controller will let you know it can no longer detect the cooler and will give you the option to reconnect the power and retry or to ignore it for now.




ILL1578-A


Once summer comes again and you power up your cooler, the controller will automatically detect the cooler and restore all functionality.

WARNINGS & SERVICE MESSAGES cont

If a service issue occurs, there are some features to help you resolve it as quickly as possible. Follow the screen prompts which will either help you fix the issue yourself or display information which will be helpful when you call your local service agent.

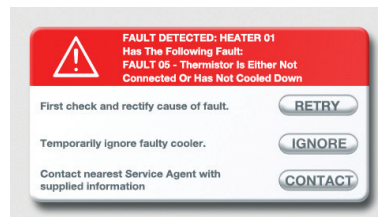

ILL1579-A

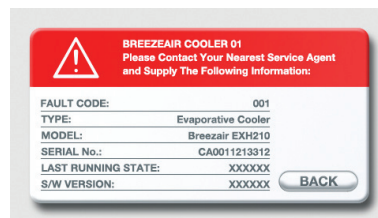

ILL1580-A

POWER OUTAGES

After a power outage your MagIQ Touch Controller will prompt you to enter the date and time.

If you have the “AUTO START” option switched on in the SETTINGS menu, your cooler or heater will automatically restart in the mode it was last operating.

TROUBLE SHOOTING

Symptom	Cause	Action
The MagIQ Touch Controller has no display.	The cable from cooler may not be fitted correctly.	Refit cable.
	Cable damaged or broken.	Replace cable.
The MagIQ Touch Controller shows my cooler/heater is on, but I can't hear the fan working.	The set temperature has been achieved and the cooler/heater is in standby.	None required.
	The controller is in PROGRAM mode and the current time period specifies the cooler/heater is “OFF”.	Review the schedule via the EDIT button on the PROGRAM home screen.

Your MagIQ Touch Controller may prompt you to call a service agent to resolve a service issue. If your Controller has only recently been installed, we recommend you call your local Dealer for support first. Otherwise, call the Service number on the back of this manual.



Warranty Service
Australia 1-300-650-644
seeleyinternational.com

It is the policy of Seeley International to introduce continual product improvement.
Accordingly, specifications are subject to change without notice.
Please consult with your dealer to confirm the specifications of the model selected.